

IPL routers

QUICK START DATA SHEET

Reference Document: 9021709-01



IPL routers are designed and produced in France by **ETIC TELECOM 13 Chemin du vieux chêne 38240 MEYLAN FRANCE** TEL : + (33) (0)4-76-04-20-00 - FAX : + (33) (0)4-76-04-20-01 Web : www.etictelecom.com
 In case of problem in the product installation, please contact your reseller or our customer support at : E-mail : hotline@etictelecom.com TEL : + (33) (0)4-76-04-20-05

1 Documentation


The data sheet, the user guide, the setup guide are available on www.etictelecom.com.

These documents are also embedded into the IPL and available in PDF format.

Please access to the home page of the IPL administration server, choose your language and click on Documentation link.

2 Getting started

Connect the power supply module to one of the 2 connector following the voltage specified on the sticker and install the IPL onto a DIN rail. After about 1 mn, the led  on the front of the unit becomes steady green indicating that the IPL is ready to work.

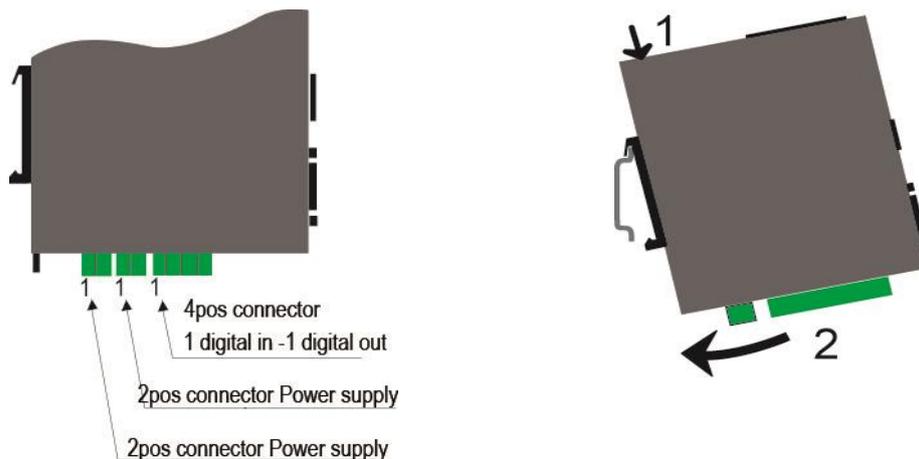

3 Setup

The IPL configuration is done via a PC with an html browser. No extra software is requested. 1st configuration is done directly connecting the PC to any LAN Ethernet port of the IPL.

Access to the administration server : Type « <http://192.168.0.128:8080/> »

Recovering the factory IP address : IP 192.168.0.128 and the factory configuration are temporarily recovered by pressing for 5 s the push button on the back of the unit. Press again the push button to return to the running configuration.